

---

ADVANCED DIGITAL LOCK

# INSTRUCTION



## 1 How to open?

- Step 1. Press " C " button
- Step 2. Press factory code " 1 2 3 4 "
- Step 3. Press " # " button
- Step 4. Turn knob (Key or Handle) clockwise and open the door while melody rings.



- 1 : In case that wrong code is tried, it sounds Bi Bi Bi Bi.
- 2 : If wrong codes are tried over 5 times, the lock gets paralysed and doesn't work.

- **Paralysis Check** : ① No sound but LED flickers when each button pushed.  
② **C # #** (LED flickers with Bi sound)

- **How to release the lock from paralysis ?**

Enter the original code twice consecutively as in the opening procedure.

EX) **C 1 2 3 4 #** → **C 1 2 3 4 #**

- Scramble numbers before and/or after the code can be used for more security.

## 2 How to close?

1. Home Safe(EN,EK) : Close the door, turn knob(or key) counter-clockwise.
2. Office Safe(EH) : Close the door. Then it is locked automatically.
3. Office Safe(EHK) : Close the door, and turn the key counter-clockwise by 360° to take it out.

- In case of EHK, if you want to use digital lock only, please turn the metal key clockwise by 360° and take it out.

## 3 How to enter 1st code?

- Step 1. Press " M " button
- Step 2. Press New Code buttons (4 digits min to 16 digits max)
- Step 3. Press " # " button (Melodic tone)

EX) If a new code is decided 2 1 0 0, press buttons as below. **M 2 1 0 0 #** (Melodic tone)



- ! To confirm if the code is exactly entered, press the code in opening procedures prior to closing door.  
For example, in case of your code 4 4 0 0, press button **C 4 4 0 0 #**.  
If the procedure is properly done, melody rings for 3 seconds.
-

## 4 How to enter 2nd code?

- Step 1. Press " M " button
- Step 2. Press " 2 " button
- Step 3. Press " # " button
- Step 4. Press 2nd New Code buttons (4 digits min to 16 digits max )
- Step 5. Press " # " button (Melodic tone)

 


**!** To confirm if the code is exactly entered, press the code in opening procedures prior to closing door.

For example, in case of your code 4 4 0 0, press button C 4 4 0 0 #.  
If the procedure is properly done, melody rings for 3 seconds.

## 5 How to erase the 2nd code?

- Step 1. Press " M " button
- Step 2. Press " # " button
- Step 3. Press " 2 " button
- Step 4. Press " # " button (Melodic tone)




## 6 When to replace batteries?

1. If you hear abnormal 'Bi-ric' , not 'Beep' sound when you press any button.
2. Door is not opened in spite of exact code entered.
  - Battery life span : 1 year (In case of three door openings a day)  
EDL77 : 1.5V AA Alkaline 4pcs / REDL2 : 1.5V AAA Alkaline 4pcs

- ★ Insulated containers are intended to release moisture to protect paper records during a fire. Therefore the door should be opened frequently to permit free circulation of air.
- ★ Stamps, coins, films, photographs, etc., must be placed in friction lid containers or heavy duty(boil proof) plastic bags and **wrapped in aluminum foil** to prevent moisture damage.

---

**Quality reputed worldwide**

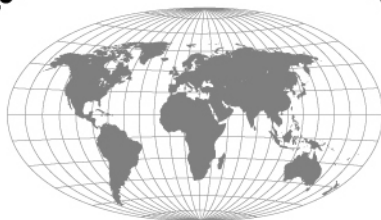

To improve products constantly, Diplomat Safe reserves the right to alter the specifications without prior notice.  
Printed in Korea, Dec. 28, 2011

---