



# **YES** Color Safes

Operating Instructions

Sun Safes Mfg. Co.

# 1

## PRECAUTION

Safety Precaution .....	2
Checklist .....	3

# 2

## INSTRUCTIONS

Battery Replacement .....	4
Opening and Closing the Door .....	5
Inputting Your Personal Code .....	6
Erasing Your Personal Code .....	7
Changing to Locking Mode .....	8

# 3

## OTHER INFORMATION

Trouble Shooting .....	9, 10
------------------------	-------

**NOTICE**


- 1 hour fire protection certified by SP NT-Fire 017 60P, UL Class 350 1hour, KS 1 hour
- Note your personal code anywhere else not to forget.
- Install a safe to a well ventilated, dry and horizontal area.
- Keep children out of mischief with a safe.




## **SAFETY PRECAUTIONS**

Please read these instructions carefully and note the operational requirements and cautions.


Precaution is composed of 'Warning' and 'Caution'.

 Warning: Failure to do so may cause serious damage and/or personal injury.


 Caution: Failure to do so may cause minor damage and/or personal injury.

### **WARNING**




 Be careful when moving a safe. You may get hurt.




 Be careful of bumped corners of a safe. You may get hurt.

### **CAUTION**



 Be careful when closing the door. Your finger may be pinched.



 Be careful that a safe may cause scratches on the floor or table.

## CHECKLIST




1. A malfunction may occur if keypad becomes moist or dirty with metallic alien substances.
2. Do not scratch or impact on the LCD display with a sharp objects.
3. Do not expose a safe to dangerous chemicals such as gasoline, benzene, solvent, acetone, thinner, or etc.
4. Do not apply direct heat or fire.
5. When not using a safe for a long time, remove batteries from a safe.
6. If you turn the handle excessively, the handle may be damaged.

### ▶ Component



Safe Body

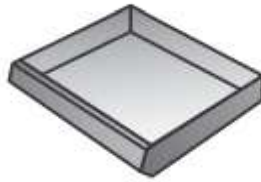

Drawer




1.5V Batteries  
(AA X 4)



Instruction

### ▶ Keypad Overview

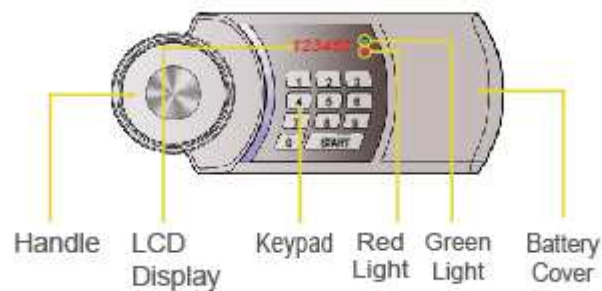

## BATTERY REPLACEMENT




### ▶ TIME TO CHANGE BATTERIES

- 1 When the battery is low, "L\_batt" will be shown on the LCD screen. You should replace the batteries immediately.
- 2 When you cannot open the door even if the code is entered correctly and the display reads "OPEn", replace the batteries.
- 3 When the "good" message is shown on the display along with a beep after entering the code correctly, replace the batteries.
- 4 When the LCD display doesn't show a message after pushing the START button, replace the batteries.

### ▶ REPLACING BATTERIES

- 1 Slide and remove the battery cover to the right.
- 2 Replace the old batteries with four 1.5V (size AA) Alkaline batteries. Ensure that the (+) and (-) positions are correct.
- 3 Place the battery cover back in its original position.

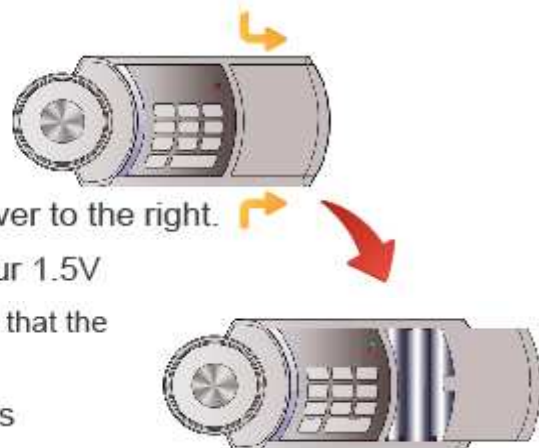

**⚠ Warning:** After replacing the batteries, ensure that the lock is working correctly before closing the door.



## OPENING and CLOSING THE DOOR



- 1 Push the START button on the control panel.

"The panel will show '-----'"

### NOTICE

- When you push the START button twice, the LCD display will change to Safety mode and will show a blank screen.



- 2 Enter the programmed factory code:  
1,2,3,4,5,6

After entering the 6 numbers, the LCD display will read "OPEn".

### NOTICE

- If the door is not opened within 4 seconds after the green light, the door will not open.
- If the START button is pushed before all 6 numbers are entered, input is cancelled and the correct codes can be reentered.
- If an incorrect code is entered, the display will show "Err-03"
- If an incorrect code is entered 5 times in a row, the safe will beep for 3 minutes.
- During the beep, if the START button is pushed and the correct code entered, the beeping will stop.



- 3 Turn the handle clockwise before the word "OPEn" disappears.

### NOTICE

- When the display reads "Open" and the green light is on, but the door is still locked, change the batteries to new ones.



- 4 To close the door, turn the handle counterclockwise.

### NOTICE

- After closing the door, check if the handle is locked correctly by turning the handle clockwise.



## INPUTTING YOUR PERSONAL CODE



**Caution** The safe can be programmed with two personal codes. ( User 1 / User 2 )  
Do not close the door until the new code has been tested.

- 1 Enter the code and open the door.

You can change the code only when the door is opened.

- 2 Press the (white) memory button located inside the door.



- 3 Press 1 or 2, then the START button.

To change the code of User 1, press 1 and the START button.  
To change the code of User 2, press 2 and the START button.

- 4 Enter your new code (6 digits).

If the START button is pressed while entering the six digits,  
the input will be cancelled and the new code can be reentered.

- 5 The new code is set up.

The LCD display will beep and show "In 1 (or 2)".

When the code of User 1 is changed, the LCD display will show "In 1".

When the code of User 2 is changed, the LCD display will show "In 2".

## ERASING YOUR PERSONAL CODES



### 1 Enter the code and open the door.

The codes can be changed only when the door is opened.



#### NOTICE

- If the START button is pressed twice, the LCD display will not show the code for security.

### 2 Press the memory button inside the door.

"USER" will be displayed and "\_" will blink.



#### NOTICE

- The (white) memory button is located inside the door.



### 3 Press 2 and the memory button to erase your personal code.



#### NOTICE

- Only User 2 code can be erased.
- After erasing the User 2 code, only User 1 code can be used.
- To reuse User 2 code, follow the instructions for INPUTTING YOUR PERSONAL CODES.



## CHANGING TO LOCKING MODE



- 1 Simultaneously press 0 and the START button and hold for 3 seconds.



- 2 When "Lock" is shown on the LCD display, the locking mode is activated.

The mode is activated, the keypad is locked and the display shows "Loct".

- 3 To change to standard mode, simultaneously press 0 and the START button and hold for 3 seconds.

- 4 "Act" is shown on the display, and the standard mode is activated again.



### NOTICE

- The locking mode will continue even after batteries are removed.

## TROUBLE SHOOTING



PROBLEM	FACTOR	SOLUTION
The START button is not working.	<ul style="list-style-type: none"> <li>Needs replacement batteries</li> <li>Poor battery connection</li> <li>The locking mode is activated.</li> <li>Failure in PCB</li> </ul>	<ul style="list-style-type: none"> <li>Change batteries to new ones and try again.</li> <li>Check if the batteries were inserted properly.</li> <li>Simultaneously press 0 and the START button and hold for 3 seconds, and then unlock the locking mode.</li> <li>Contact the service department of the local retailer.</li> </ul>
The beeping doesn't stop.	<ul style="list-style-type: none"> <li>The incorrect code has been entered 5 times.</li> </ul>	<ul style="list-style-type: none"> <li>Try the correct code. After 3 minutes, the beeping will stop and it will return to its standard state.</li> </ul>
The green light and "OPEN" message are on, but the door won't open.	<ul style="list-style-type: none"> <li>Needs replacement batteries</li> <li>Turn the handle counterclockwise.</li> <li>Failure in lock system.</li> </ul>	<ul style="list-style-type: none"> <li>Change batteries to new ones and try again.</li> <li>Turn the handle clockwise.</li> <li>Contact the service department of the local retailer.</li> </ul>
The previous codes have not changed to new ones.	<ul style="list-style-type: none"> <li>Time lag while changing the code.</li> <li>Wrong procedure in changing or deleting the code.</li> <li>The wrong code was changed or deleted on the previous attempt.</li> <li>Button failure</li> </ul>	<ul style="list-style-type: none"> <li>After pressing the memory button or the START button, enter the new code within 5 seconds.</li> <li>Follow the instruction on page 6 or 7 and try again.</li> <li>Check if User 1 or User 2 code has changed.</li> <li>Contact the service department of the local retailer.</li> </ul>
"Err-03" message is shown on the LCD display.	<ul style="list-style-type: none"> <li>An incorrect code was entered.</li> <li>An error occurred repeatedly.</li> </ul>	<ul style="list-style-type: none"> <li>Try the correct code.</li> <li>If the correct code is entered, the error sign will disappear.</li> </ul>

## TROUBLE SHOOTING



PROBLEM	FACTOR	SOLUTION
"L_batt" message is shown on the LCD display.	<ul style="list-style-type: none"><li>Needs replacement batteries.</li></ul>	<ul style="list-style-type: none"><li>Change batteries to new ones and try again.</li></ul>
"Lock" message is shown on the LCD display.	<ul style="list-style-type: none"><li>The locking mode is activated.</li></ul>	<ul style="list-style-type: none"><li>Simultaneously press 0 and the START buttons, hold for 3 seconds and unlock the locking mode.</li></ul>
"no con" message is shown on the LCD display.		<ul style="list-style-type: none"><li>Contact the service department of the local retailer.</li></ul>
When you lose your personal code		<ul style="list-style-type: none"><li>Contact the service department of the local retailer.</li></ul>